





## GDP\_AUSTAUSCH\_TH-KAR

- (DE) Austausch der Thermostat-Kartusche
- (BG) Смяна на термостатния пълнител
- (CZ) Výměna termostatické vložky
- (DK) Udskiftning af termostat-patronen
- (ES) Sustitución del cartucho del termostato
- (EE) Termostaadi kasseti vahetamine
- (FI) Termostaattipatraruunan vaihto
- (FR) Remplacement de la recharge du thermostat
- (GB) Replacement of the thermostat cartridge
- (HR) Zamjena termostatskog uloška
- (HU) A termosztát-patron cseréje
- (IT) Sostituzione della cartuccia del termostato
- (IS) Útskipting á deili í hitastilli
- (NL) Vervanging het thermostaatpatroon
- (NO) Skifting av termostatpatron
- (PL) Wymiana wkładu do termostatu
- (RO) Înlocuirea cartușului termostatului
- (RU) Замена термостатического картриджа
- (SE) Byte av termostatpatron
- (SI) Zamenjava termostatskega vložka
- (SK) Výmena termostatickej kartuše
- (TR) Termostat kartuşunu değiştirme

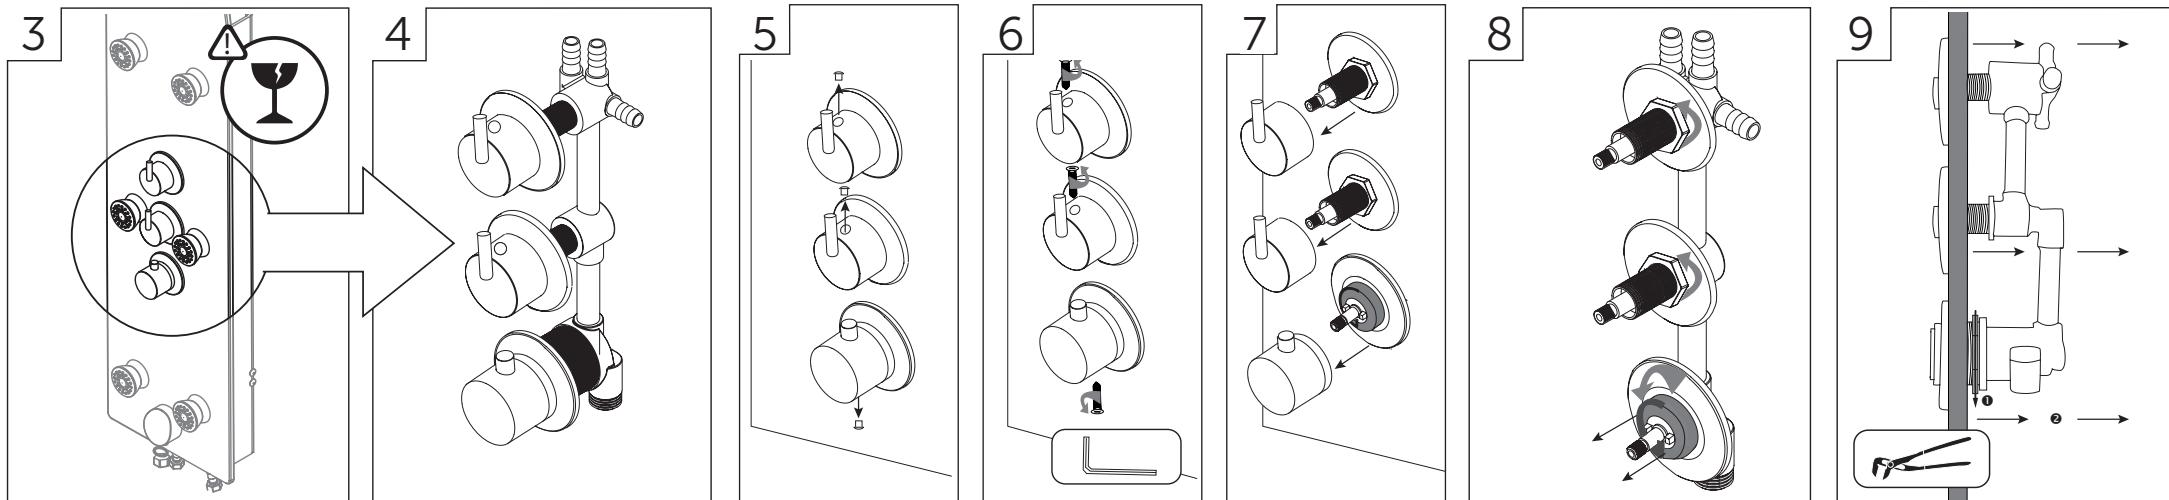

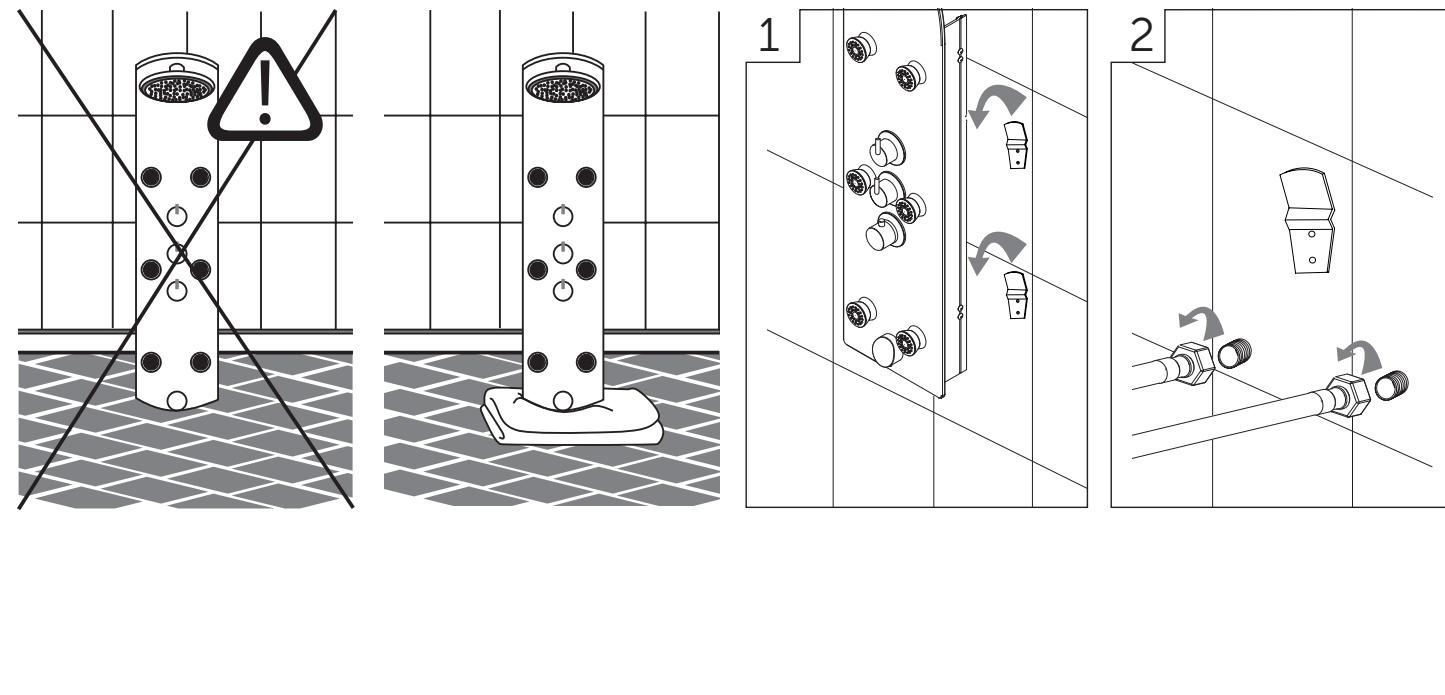

## GDP\_AUSTAUSCH\_TH-KAR

