



DE Austausch des Umstellers

BG Смяна на превключвателя

CZ Přepínač sprchy

DK Udsiftingning af omskifterknap

ES Cambio del conmutador

EE Ümberlüüiti asendamine

FI Vaihtimen vaihto

FR Remplacement de l'inverseur

GB Exchange of the tap-changer

HR Zamjena razvodnika

HU Az átváltó cseréje

IT Sostituzione del deviatore

IS Skipt um umbreytara

NL Vervangen van de omzetter

NO Utskifting av omstillingsknappen

PL Wymiana przełącznika

RO Înlocuirea diverterului

RU Замена переключателя

SE Byte av omkastare

SI Zamenjava preklopnega gumba

SK Prepínač sprchy

TR Değiştirici elemanını değiştirme



